Botron B8525 Technical Data Sheet



Features:

Alarm:

Test Range:

Testing - Wrist:

Botron's B8525 Deluxe Dual Test Station features a sleek adjustable black frame and molded foot plate. Wires simply slip into the frame and are hidden and kept safe from snagging and interference. With the dual tester, personnel can verify wrist straps and any type of footwear ranging from heel grounders to conductive shoes.

PROPERTIES SPECIFICATIONS

Frame: Adjustable Metal Frame

Floor Plates: Stainless Steel/Molded Composite

Frame size: 36"
Plate size: 18" x 14"
Battery: 9 volt

LEDs: (7) 2 - Low, 2 - Pass, 2 - High and

1 - Low Battery Internal buzzer 750k - 100 MegOhm 750k - 12 MegOhm 750k - 120 MegOhm

Testing - Footwear: 750k - 120 MegO Mounting: Free standing External Power: AC/DC (optional)

Wrist strap and footwear ranges are independently set +/- 5%

PART NUMBERS

B8525 Deluxe Dual Test Station B8525T Deluxe Tester Only



- Simultaneously Test Both Feet
- Uses 9 Volt Battery
- Visual and Audible Alarms
- LED Light Indicators
- Low Battery Indicator



Botron Company Inc. | 21601 N. 21st Ave. Phoenix AZ 85027 | Ph# 623-582-6700 | Fax# 623-582-6776

OPERATION

Bolt aluminum plate onto stand with (6) machine screws and nuts.

Install 9 volt battery into rear compartment.

Snap Tester onto test station stand.

Connect wires into bottom of tester through access holes in stand.

Plug other end of wires into pre-drilled holes in plate.

With heel grounders on both feet, step onto plate and press touch plate.

When testing wrist straps, plug banana jack into front of tester. Switch to "wrist strap" setting and push touch plate.