
Botron B8582 Megohm Meter measures not only resistance, RTG, RTT and volume resistance but Temperature and Humidity. You can test with the 5lb weights or for quick test with the built-in parallel rails on the back. It tests at 10 volts or 100 volts depending on the material you are testing. It will test mat, floors, garments, seating and many other production supplies. Easy to read LCD digital display. Conforms to ANSI/EOS/ESD (S4.S7.1, S12,S2.1) ASTM-F150 AND NFPA99A standards. RTT (resistance top to top) and RTG (resistance top to ground) will measure a wide variety of static dissipative and conductive materials. **Disclaimer:** All statements of technical information are believed to be true and are based upon tests we believe to be reliable. The proper use and application for this product must be the responsibility of the user. The statements herein shall have no force or effect.

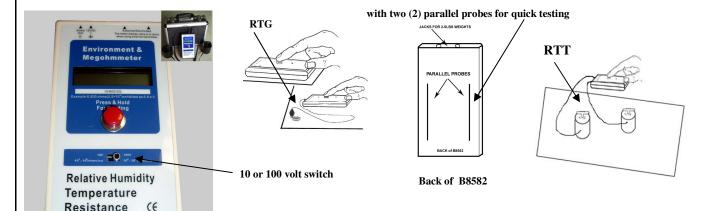

PROPERTIES	SPECIFICATIONS
Display: Temperature:	LCD digital 32-100F

**Humidity:** YES CE: YES **Test Voltage:** 10 & 100 volts  $10^3 - 10^{12}$ **Test Range: Battery:** 9 volts **Electrodes:** Two parallel **Electrodes:** Two 5lb weights **Ground leads:** two Size:

4"x 7.5" x 1.25" +/-10% Accuracy range:

Auto shut off: YES Power supply: YES YES Foam filled case:

B8582

### **OPERATION:**

- . To test RTT or surface to surface, place the B8582 on the surface to be tested and push down on test button hold for reading.
- . To test RTG or surface to ground, place the B8582 on the surface, plug one lead plug into meter top end, with other end connect to suitable ground, and push button, hold for reading.

To test with the 5lbs weights, plug leads into banana jack on top end of unit and into weights and test as above.

#### OTHER PRODUCTS:

B8201 Touch plate wrist strap Tester B8511 Combo tester, wrist & heel B82450 Combo testers & stand B82250 **Dual tester & stand** B85501 Wrist Calibration unit B85502 Combo Calibration unit

MODEL B8582

B8202 Wrist tester

B8525 Deluxe dual test station **Theory of operation**, The surface resistance meter measures by setting up bridge between two precision resistors of a know value and testing of the unknown value. When the button is depressed a test voltage of 10 or 100 volts is applied across the two conductive parallel probes on the bottom of tester or through the weights. The LED will light giving you the values in ohms.

### **RELATED TEST EQUIPMENT:**

B8562 New 10light 100volt surface meter B8560 New 10 light surface meter

BSRM-10 10 light surface meter

BSRM-6 6 light surface meter

B8563 Analog audit kit with 5lb weights B8572 Analog/Digital audit kit w/weights

# BOTRON CO. INC.

325 W. MELINDA LN PHOENIX AZ 85027 PH# 623-582-6700FAX# 623-582-6776

### **FINAL TEST**

Calle del Ebano #16625 Jardines de Chapultepec Tijuana B.C. Mexico Tel. (664) 681 1130 Fax. (664) 681 1150 Tel. 01800 027-4848 www.finaltest.com.mx

## NEW TEMPERATURE & HUMIDITY AUDIT KIT

S8582