



Model 5899A Multi-Use DMM Test lead Kit €

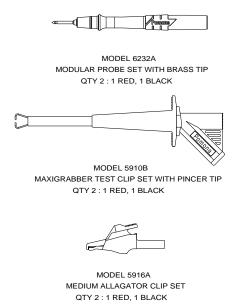

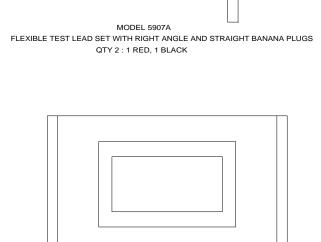

TRI-FOLD NYLON POUCH

For data sheets / specifications of the kit individual components, <u>visit the Pomona web site at</u>: <u>www.pomonaelectronics.com</u>

FEATURES:

- ✓ Test leads with a right angle banana plug are ideal for use with hand held digital multimeter.
- ✓ Flexible test leads feature high strand count silicone wire for extreme flexibility and high temperature resistance.
- ✓ Banana plugs are molded directly to the wire for superior pull strength.
- ✓ Probe body, medium alligator or Maxigrabber Clip® attaches directly to the flexible test leads for test versatility.
- ✓ Tri-fold pouch of durable nylon conveniently stores the test accessories.
- ✓ Compatible with most multimeters that accepts safety style sheath banana plugs.
- ✓ CE Compliant; complies with IEC 1010-2-031 standard for hand held accessories.

All dimensions are in inches. Tolerances (except noted): $.xx = \pm .02$ " (,51 mm), $.xxx = \pm .005$ " (,127 mm). All specifications are to the latest revisions. Specifications are subject to change without notice. Registered trademarks are the property of their respective companies.







Model 5899A Multi-Use DMM Test lead Kit €

Pomona®


The items included with this product are certified to meet IEC 1010-2-031 safety requirements.

Les éleménts inclus avec ce produit sont certifies pour répondre à des exigences de sureté du IEC 1010-2-031. Los items incluidos con este producto se certifican para resolver requisitos de seguridad del IEC 1010-2-031.

 Only IEC 1010 type shrouded test plugs should be used with IEC 1010 type jacks. NEVER INSERT A PROBE TIP WITH BANANA SPRING INTO A TEST ACCESSORY JACK THAT WILL BE USED AS A HAND HELD PROBING DEVICE -Seuls les vérificateurs de tension renforcés de type IEC 1010 devraient être utilisés avec des jacks de type IEC 1010. NE JAMAIS INSERER DE BOUT DE SONDE AVEC RESSORT BANANE DANS UN JACK D'ESSAI D'ACCESSOIRES QUI SERA UTILISE COMME DISPOSITIF DE SONDAGE A MAIN.

-Se deben usar sólo tapones de prueba reforzados del tipo IEC 1010 con receptáculos de tipo IEC 1010. NUNCA INTRODUZCA UNA CLAVIJA CON UN MUELLE TIPO BANANA EN UN RECEPTACULO DE PRUEBA QUE A SU VEZ SE USE COMO APARATO DE PRUEBA MANUAL.





Overvoltage Category I, II, III or IV.
Surtension Catégorie I, II, III ou IV.
Sobretensión de Categoria I, II III o IV.



Caution! Refer to Accompanying Documents. Attention! Se Reporter aux Documentsjoints.; Peligro! Consulte los Documentos Adjuntos.



Caution! Risk of Electric Shock. Attention! Risque de Choc Électrique. ¡Peligro! Riesgo de Sacudida Electrica.

All dimensions are in inches. Tolerances (except noted): $.xx = \pm .02$ " (,51 mm), $.xxx = \pm .005$ " (,127 mm). All specifications are to the latest revisions. Specifications are subject to change without notice. Registered trademarks are the property of their respective companies.