Tektronix RSA306 USB Spectrum Analyzer Self-Guided Demo







Tektronix RSA306 USB Spectrum Analyzer Self-Guided Demo

Revision A

www.tektronix.com 071-3330-00



Copyright [©] Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Contacting Tektronix

Tektronix, Inc. 14150 SW Karl Braun Drive P.O. Box 500 Beaverton, OR 97077 USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit *www.tektronix.com* to find contacts in your area.

Table of Contents

Introduction

Demo guide overview	5
Fundamental operations of spectrum analyzers	5
Real-time DPX	6
Modulation	6
EMI spurious search	7
Over-the-air demo	7
Setup	8

Demo instructions

Demo 1: Basic spectrum measurements with m			
Demo 2: Power measurements with markers			26

Demo 3: Traces and detectors	29
Demo 4: Save and recall	37
Demo 5: DPX and transient capture	41
Demo 6: Transient capture - Mask test and act on violation	51
Demo 7: Analog modulation analysis	59
Demo 8: Digital modulation analysis	67
Demo 9: EMI spurious	76
Demo 10: FM listening (Demo board not needed)	83
Demo 11: ISM band DPX (Demo board not needed)	89

Introduction



With this guide, you will explore what you can do with the RSA306 USB spectrum analyzer. Applications range from simple frequency / amplitude measurements of RF signals to real-time and modulation analysis that provide you with a complete system view of your device under test.

Check list for the demo

Before beginning the demo, please be sure you have the following items:

Item	Illustration
RSA306 USB spectrum analyzer	The second secon
RTSA demo board	

Item	Illustration
USB Y-cable (to power the board)	
N-BNC adapter	
Whip antenna	

Introduction

Item	Illustration
BNC cable	
USB 3.0 cable	

Demo guide overview

Fundamental operations of spectrum analyzers

The Tektronix RSA306 USB Signal Analyzers have the ability to perform basic spectrum measurements that most Spectrum Analyzer users are already accustomed to. The goal of this part is to demonstrate that the instrument has these basic spectrum analyzer capabilities.

- Demo 1: Basic spectrum measurements with markers
- Demo 2: Power measurements with markers
- Demo 3: Traces and detectors
- Demo 4: Save and recall

Introduction

Real-time DPX

Two of the most challenging types of signals to identify and capture are low-level signals close to your signal frequency and rarely-occurring transients. Sometimes the interference is so infrequent that you can't detect it at all. You suspect it is there because of seemingly-random errors. DPX Spectrum instantly demystifies these situations by displaying a clear image of the offending signals. Its capture probability is 100% for transients as short as 100 µsec.

- Demo 5: DPX and transient capture
- Demo 6: Transient capture: Mask test and act on violation

Modulation

Digital modulation is used in virtually all modern communication systems. These systems have penetrated every aspect of our lives at a rapid pace. The growth has put increased stress on the ability to quickly and efficiently analyze a wide variety of digital modulation schemes. In some cases, general modulation schemes have been included in complex standards with rigorous specifications involving manual test procedures according to these standards that require lengthy test setups with skilled engineers. Analog modulation is the most fundamental modulation method, and is frequently used to demonstrate principles in education labs.

- Demo 7: Analog modulation analysis
- Demo 8: Digital modulation analysis

EMI spurious search

From the first wireless transmissions, electromagnetic interference (EMI) has been a concern for design engineers. General-purpose spectrum analyzers that contain appropriate filters and detectors are often employed in diagnostics and pre-compliance, as they are fast measurement tools that often are already used in the design process and do not require additional capital expense.

Demo 9: EMI spurious

Over-the-air demo

This part shows how to use the RSA306 in off-air applications. Using the whip antenna provided with the RSA306 demonstration kit, you can demodulate and listen to the signals from the local FM broadcasting station, see the realtime spectrum of the signals in the ISM band created by your smart phone, and use the RSA306 in interference-hunting.

- Demo 10: FM listening
- Demo 11: ISM band DPX

Setup

As with any test, one of the first steps is to connect the instrument to the device under test. For the initial exploration, a demo board has been provided to output signals needed for the demo. After you've completed the demo and have gained an understanding of how the RSA306 operates, connect to your own system and see how the RSA306 can help in your day-to-day work.

1. Install SignalVu-PC


Install the SignalVu-PC software onto your PC. You can download the software from www.tektronix.com/ downloads, or it is available on the flash drive that is provided with the RSA306.

2. Set up the RSA306

- Power the RSA306 by connecting the USB 3.0 cable to the USB 3.0 port of your PC.
- Install the N-BNC adaptor on RSA306.
- 3. Setup the demo board
 - Connect one end of the USB Y-Cable to the demo board.
 - Connect the other end of the USB Y-Cable to 2 USB ports either on your PC or a separate USB power supply.

4. Connect the RSA306 to the demo board

- Connect one end of the BNC cable to the RF port of the RSA306.
- Connect the other end of the BNC cable to the RF port of the board.

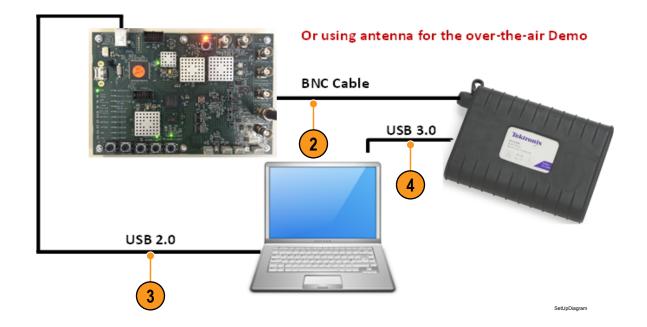


Demo instructions

Demo 1: Basic spectrum measurements with markers

When using a spectrum analyzer, one of the first settings is that of the frequency. In this demonstration, we will use markers to locate the CW signal generated from the demo board, and set the appropriate frequency for the measurement.

Instructions for the demo board

- 1. Press the On button to turn on the demo board.
- 2. Set the reference to INT (internal reference).
- 3. Set the run mode to FREE RUN.
- **4.** Click the ROW and COLUMN buttons to select CW as the signal to generate.

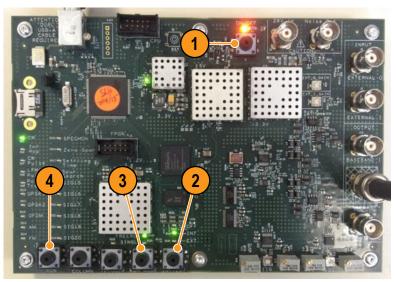

demoboard1

Instructions for the RSA306

 Double click the SignalVu-PC icon on the PC desktop to start the application.



2. Click Live Link on the menu bar to view the drop down menu. Click Search for Instrument.

A notification will briefly appear stating that the instrument was found.

3. Click Connect To Instrument. Select RSA306@USB USB::0. First-time connection to the analyzer may take up to 10 seconds.



rsaconnect


4. A Connect Status dialog box will appear to confirm the instrument is connected. Click OK.



TIP. You can quickly verify connection status by looking at the connection indicator square on the menu bar. It is green () when an instrument is connected. It is red () when it is not. You can also view the name of the instrument that is connected by hovering the mouse indicator over the .



5. Click the Preset button.



6. Click the settings button to display the settings control panel.



7. Click Max Span to set the Span to the maximum value.




8. Right click the screen, and select Marker to peak.



TIP. Right Click on Tablet

Touch the screen where you want to right-click, hold until a complete square appears, and then lift your finger. The shortcut menu appears after you lift your finger.



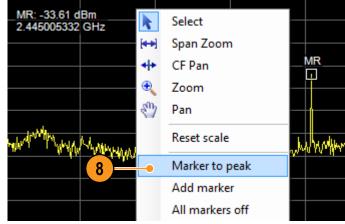

markertopeak

For Tablet users

Activate the on-screen numeric entry of values and Up/Down controls by selecting View: Numeric Keypad.

When the Numeric Keypad view is activated, up/down arrows and a numeric keypad icon will pop up whenever a field requiring input is selected.

<u> </u> File	View	Run	Replay	Mar
> 💾 🖌		Full Scre	en	
		Replay T	oolbar	
g dB/div:		Marker T	oolbar	1
10.0 dB	~	Status Ba	r	- 1
BBW:		Navigato	or View	- 1
300 kHz	~	Numeric	Keypad	
VRW-	_			



Selecting the 'calculator' numeric keypad icon will pop up a numeric entry box.



9. Click To Center in the bottom marker setting area. This sets the center frequency of the analyzer to the center of the signal.




10. Set the Span to 40 MHz.




- 11. Click Peak.
- 12. Click To Center again.



13. Right click the screen, and select Add marker.

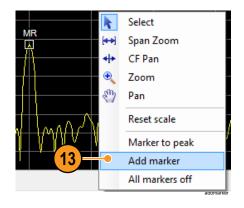

- **14.** Drag the new marker M1 to the noise level. Notice that readouts show:
 - The amplitude and the frequency of the reference marker (MR).
 - The amplitude and the frequency of the selected marker (M1).
 - The difference (Δ M1) between the selected marker position and the position of the reference marker.

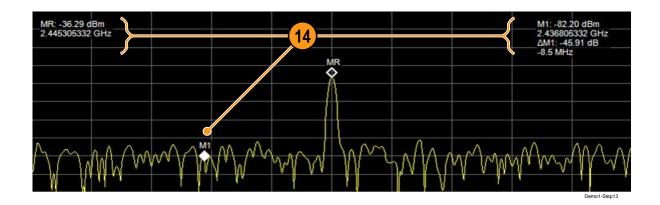



TIP. Undo, Redo, and Recall


You can undo anything you do with this 🔼 😁 control.

If you are having trouble with this step, recall the setting *Demo1_CW*. *tiq* from the directory *C:/Signa1Vu-PC Fi1es/Examp1e Fi1es*. This will give you the correct amplitude, frequency, span and marker settings automatically. This file also contains data collected from a previous test and creates a trace on screen of the result. Press Run to clear this data and take results from your instrument. **15.** Set the RBW to 30 kHz. The RBW setting is located at the left side of the spectrum display.



TIP. RBW

The resolution bandwidth (RBW) determines the fast Fourier transform (FFT) bin size, or the smallest frequency that can be resolved. Smaller RBW improves the selectivity, but degrades the sweep speed and the trace update rate.

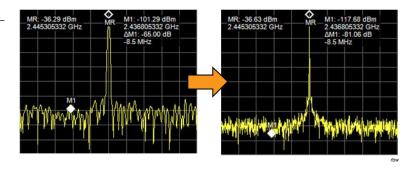


- **16.** Select Options from the Tools menu.
- **17.** Under the Prefs tab, set the Color Scheme to Blizzard.

Too	ls Live Link Window	Save and Export Security Prefs
ž I	Mask Test	
	Activate License Manage Licenses	Color scheme: Classic -
-	Options	Thunderstorm
	RSA Map 16	Markers snar Classic
		blizzard



TIP. Ink Saver Mode

You can print screen images with a white background. Selecting the scheme color to Blizzard makes the background color changes from black to white in the graphs.

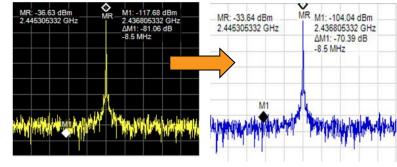

Demo1Step16Note

Demo 2: Power measurements with markers

Integrated power between markers is an easy way to measure the power of a modulated signal without setting up a channel power measurement. SignalVu-PC performs integrated power and power density measurements using power markers. When measuring signal density, the signal is assumed to be noise like, and measurements are corrected to a 1 Hz bandwidth. Selecting power measurement markers automatically switches the trace detector to Ave (RMS) for accurate results. Integrated power between markers is an easy way to measure the power of a modulated signal without setting up a dedicated channel power measurement.

Instructions for the demo board

 Keep the same setting as the last demo. Use the ROW and COLUMN buttons to change the signal type from CW to OFDM.



Instructions for the RSA306


- 1. Keep the same setting as the last demo, or recall the setting Demo1_Cw.tiq. Click the Stop button to pause the measurement.
- 2. Drag the marker reference (MR) on left side, and marker 1 (M1) on right side of the OFDM spectrum.
- 3. Click the Define button in the Marker settings.
- 4. Within the Marker Properties tab, in the Readouts dropdown box, select Power.



TIP. You can measure phase noise by setting the delta marker to dBc/Hz.

Advanced channel power measurement and ACLR (adjacent channel leakage power ratio) measurement can be done in "Chan Pwr and ACPR" display.



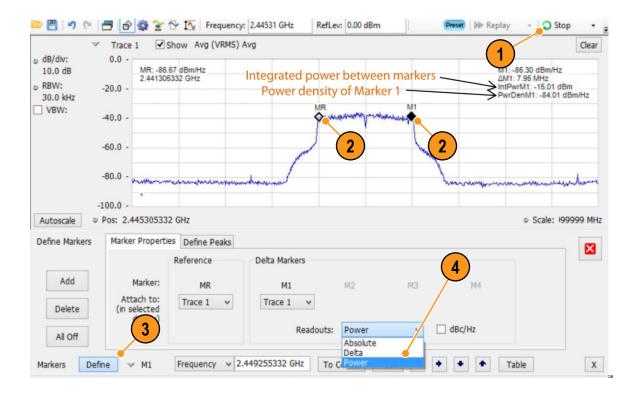

Demo 3: Traces and detectors

This demo familiarizes you with the trace detection and function controls available in SignalVu-PC used with the RSA306.

Instructions for the demo board

1. Keep the same setting (OFDM signal) as the last demo.




Instructions for the RSA306

1. Keep the same setting, or recall the setting Demo2_OFDM_marker.tiq. Click Run.



Demo3Step1

2. Right click the screen, and select All markers off.

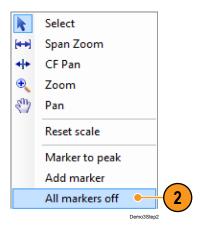


3. Click the settings button to display the Settings control panel.



 In the Traces tab, select Trace 1, and then set Detection to Avg (VRMS) and Function to Avg (VRMS).

Freq & Span BW Traces Scale Prefs	
Trace: Trace 1 🔻 🗹 Show	
Detection: Avg (VRMS) -	4
Function: Avg (VRMS) - 10	:
	Demo3Step4
Freq & Span BW Traces Scale Prefs	-
Freq & Span BW Traces Scale Prefs Trace: Trace 2 Show	
	5
Trace: Trace 2	

5. Select Trace 2, and then set Detection to +Peak, Function to Max Hold, and enable Show. 6. Select the trace to Trace 3, select Detection to -Peak, Function to Min Hold, and enable Show.

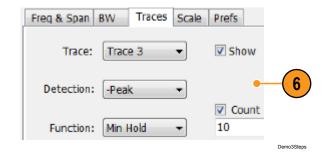




TIP. Trace detectors process the data underlying the trace to provide the results you need depending upon your application. Available detection methods are +Peak, -Peak, Avg (VRMS), Sample, and CISPR Pk.


Trace functions are applied to multiple traces as they are displayed. Available settings are Normal, Average, Max Hold, and Min Hold. The Number of Traces setting specifies how many traces are averaged.

The same selections are available in the upper left display selection and mouse-over dropdowns.



The results show the three difference traces displayed in the screen at the same time.

- The Average trace is generated by multiple traces averaged together. There is one vertical value for each underlying frequency data point. Once the specified number of traces have been acquired and averaged to generate the displayed trace, each new trace takes the place of the oldest trace in the calculation.
- Max Hold trace displays the maximum value in the trace record for each display point. Each new trace display point is compared to the previous maximum value and the greater value is retained for display and subsequent comparisons.
- Min Hold trace displays the minimum value in the trace record for each display point. Each new trace display point is compared to the previous minimum value and the lesser value is retained for display and subsequent comparisons.

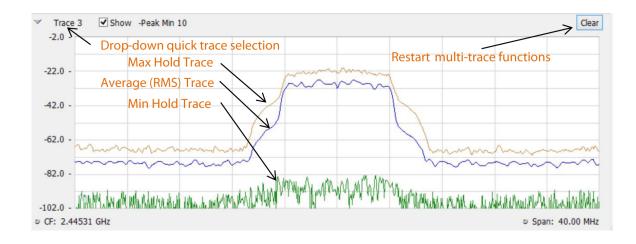



TIP. Right-click action menu. You can change marker settings and how waveforms are displayed by using the right-click Actions menu.

Select	Selects markers and adjusts their position.				
Span zoom	Zooms the graph area about the selected point. Right-click in the graph display at a point of interest and drag to increase or decrease the span about the point of interest. Span zoom adjusts the span control.				
CF pan	Adjusts the center frequency according to horizontal movement.				
Zoom	Adjusts the horizontal and vertical scale of the graph. The first direction with enough movement becomes the primary scale of adjustment. Adjustment in the secondary direction does not occur until a threshold of 30 pixels of movement is crossed. Dragging to the left or down zooms out and displays a smaller waveform (increases the scale value). Dragging to the right or up zooms in and displays a larger waveform (decrease the scale value).				
Pan	Adjusts the horizontal and vertical position of the waveform. The first direction with enough movement becomes the primary direction of movement. Movement in the secondary direction does not occur until a threshold of 30 pixels of movement is crossed.				
Marker to peak	Moves the selected marker to the highest peak. If no marker is turned on, this control automatically adds a marker.				
Add marker	Defines a new marker located at the horizontal center of the graph.				

Demo 4: Save and recall

In SignalVu-PC, you can save different types of data for later recall and analysis.

Instructions for the demo board

1. Keep the same setting (OFDM signal) as the last demo.

Instructions for the RSA306

 Keep the same setting, or recall the setting Demo3_OFDM_trace.tiq. Select Save As from the File menu to open the Save As dialog box.





 Navigate to the folder where you want to save the setups, or use the default location. Enter a file name. Select the type of file to Acq data with setup (TIQ)(*.tiq).

Save as type:	Acq data with setup (TIQ) (*.tiq)		
	Setup (*.Setup)		
	Picture (PNG) (*.PNG)		
le Folders	Picture (JPG) (*JPG)		
	Picture (BMP) (*.BMP)		
. البيه	Results export (CSV) (*.csv)		
We a hit to be	Measurement settings export (TXT) (*.txt)		
	Selected trace (*.Specan)		
(2)	Acq data with setup (TIQ) (*.tiq)		
	Acq data export (CSV) (*.csv)		
17	Acq data export with setup (MAT) (*.mat)		
	Demo4-2		

3. Click save.



Demo4-3

4. Click the Preset button.



 Select Recall from the File menu to open the Open dialog box. Navigate to the folder containing the file you want to recall. Select the .tiq file you just saved to recall, and click the

Open icon 쫃.



TIP. File formats you can use to save files

Setup files (Setup)	Saves all of the setup information for all displays.		
Screen shot (PNG/JPG/ BMP)	Saves a capture of the screen in the specified format.		
Results Export files (CSV)	Saves the trace and numeric data for the selected display. The trace and numeric data are saved as CSV files.		
Measurement Settings (TXT)	Saves a list of settings relevant to the selected measurement to a text file. This option is useful for including the measurement settings in reports.		
Trace (Various)	Saves a trace for later recall into the display from which it was saved.		
Data (TIQ/CSV/MAT)	Saves data and measurement setup for analysis later (TIQ format) or as data to use with external software in either CSV (comma-separated value) or MAT (MATLAB) formats.		

Demo 5: DPX and transient capture

The DPX display helps you to see how traces change over time and displays signal events that cannot be seen on a swept spectrum analyzer. DPX Spectrum indicates how traces change in two ways. First, it uses color shading to show how consistent the shape of a trace is. Second, it uses persistence to hold signals on the screen so you can see them longer. The DPX display reveals transient signal behavior that helps you discover instability, glitches, and interference.


Instructions for the demo board

 Keep the same setting as the last demo. Use the ROW and COLUMN buttons to change the signal from OFDM to Inf Hop (Infrequent hopping signals).




Instructions for the RSA306

1. Keep the same setting, or recall the setting Demo3_OFDM_trace.tiq. Click the Display icon.

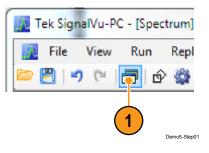

- **2.** In General Signal Viewing, select DPX from the Available displays box.
- Click the Add button (or double-click the DPX icon). This will add the DPX icon to the Selected Displays box.
- 4. Click the OK button.

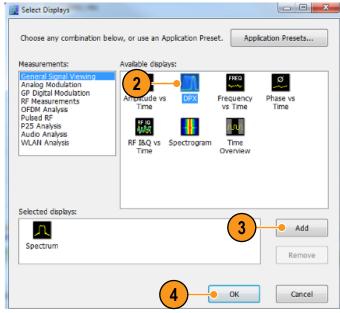

Demo5-Steps2-4

 In the DPX display, set the CF to 2.4453 GHz and the Span to 40 MHz.
 CF: 2.44530 GHz


6. Select the Split view.

You can see the hopping signals displayed in the DPX spectrum, and compare it in the standard spectrum display on the right side. Note that the standard spectrum display nearly or always misses the transient signal.

5

Span: 40.00 MHz

Demo5-First5Steps

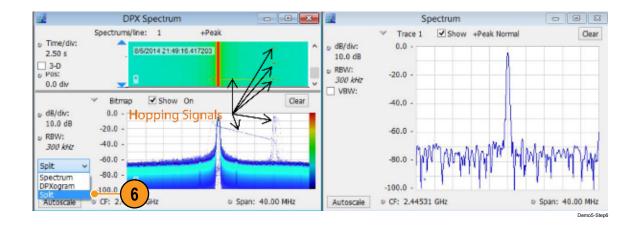


7. Select the DPX display by clicking anywhere on it with the mouse, and click the settings button.






TIP. Changing the color scheme

In the "temperature" palette, the highest color (Maximum) is deep red and the lowest (Minimum) is dark blue. Values between Maximum and Minimum are represented by the other colors of the palette. Under the Bitmap Scale tab, set the Max scale to 3% for the DPX Spectrum display.

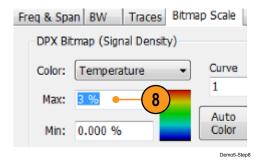


 Under the Ampl Scale tab, set the Min color scale to -80 dBm for the DPXogram display.

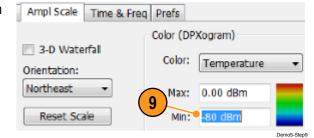

10. Under the Prefs tab, enable Show parameter readouts.



- **11.** Click Stop to pause the measurement. Right click the DPXogram screen, select Add marker, and drag the marker to one hopping signal. Then add another marker and drag it to the closest hopping signal. The delta marker will show the time between two hopping signals is about 1.25 s, or the hop occurs every 1.25 second.
- **12.** You can set the size of the DPX spectrogram by selecting the divider bar between the displays and moving it up or down to add area to the display of interest.

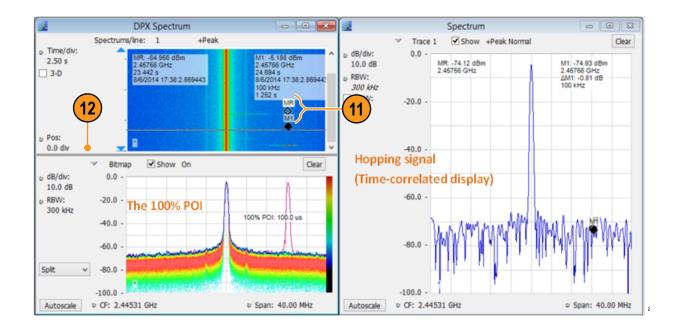



TIP. 100% POI

The minimum event duration required to ensure 100% Probability of Intercept (POI) or event capture. It depends on interaction between span, RBW, and FFT length. You can use the POI time value to determine if you are at risk of either missing a narrow transient or of its captured amplitude being less than the actual signal. The minimum 100% POI for RSA306 is 100 μ s.

Demo 6: Transient capture - Mask test and act on violation

The mask test feature in SignalVu-PC allows you to save events of interest automatically and allows you to save an acquisition file in an open data format and/or a screen capture when a signal in the frequency domain violates the mask.

Instructions for the demo board

1. Keep the same setting (Infrequent hopping signals) as the last demo.


Instructions for the RSA306

1. Keep the same setting, or recall the setting Demo5_DPX.tiq. Click Run.






2. Under the Tools menu, click Mask Test....

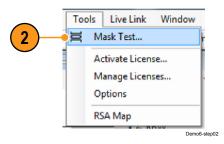

- **3.** Select DPX: Trace1 from Search in:.
- 4. Select is outside mask from Test for:.
- 5. Click Edit limits... to open the Mask Test Editor.

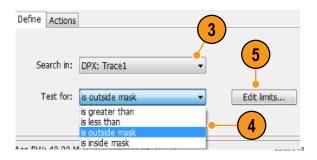


- 6. In the Mask Test Editor, select the DPX Trace1 as the Reference.
- 7. Click Auto Draw to generate a mask automatically adjusted to the Reference.
- 8. Click Done.



TIP. Mask Test Editor


- The margins between the mask and the reference trace can be specified by X Margin and Y Margin.
- The points can be added, edited, or deleted.
- You can also create a Frequency Mask by using the manual method.

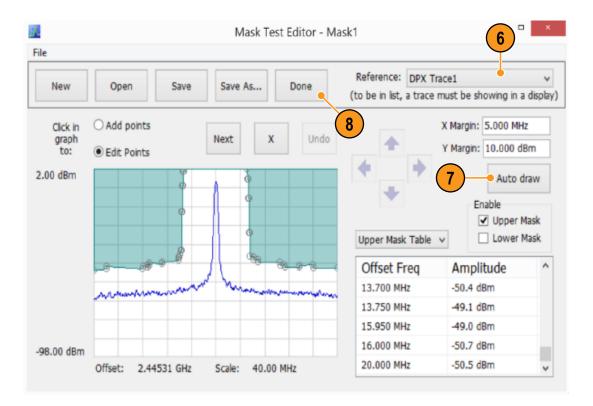

9. In the DPX display, and click the settings button.



10. Select Trace1 as the Trace under the Traces tab.

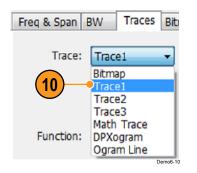

11. Under Tools, click Mask Test....




- **12.** Under the Actions tab, select Beep, Save acquisition data, Save trace, and Save picture.
- 13. Click Enable Test.

When a mask violation is detected, the system will sound a beep, and save all your selected format of files into the selected folder automatically.



TIP. Actions for violations

- The analyzer can take up to five actions when a match occurs. In Run mode, the analyzer can sound a beep, stop acquisitions, save acquisition data, save trace data, and save a picture of the display. In Replay mode, it can sound a beep and stop analyzing.
- Files can be saved in the native format of SignalVu-PC (.tiq), or in comma separated variable (.CSV) or Matlab level 5 (.MAT) formats.
- The folder for saving files can be selected from Save as....

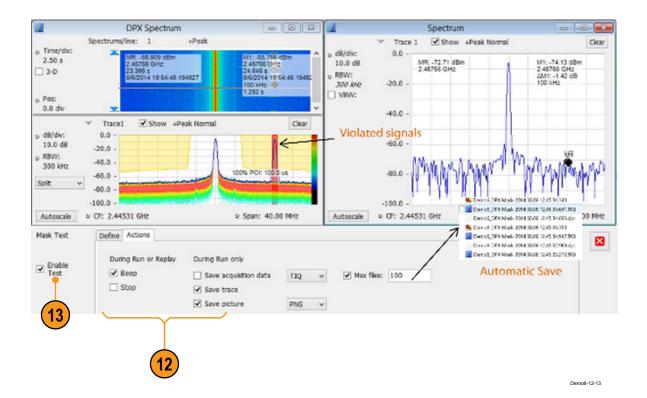

RSA306 Self-Guided Demo

Demo 7: Analog modulation analysis

Analog modulation is the most fundamental modulation method. The analog modulation analysis feature in the RSA306 series provides measurements to demodulate and analyze amplitude modulation (AM), frequency modulation (FM), and phase modulation (PM). This example shows how to analyze an FM signal with the RSA306.

Instructions for the demo board

 Keep the same setting as the last demo. Use the ROW and COLUMN buttons to change the signal type from Inf Hop to FM (frequency modulation signals).



Instructions for the RSA306


1. Click the Preset button.



2. Click the Display button.



- **3.** In General Signal Viewing, select DPX from the Available displays box.
- Click the Add button. This will add the DPX icon to the Selected Displays box (and remove it from the Available displays box).

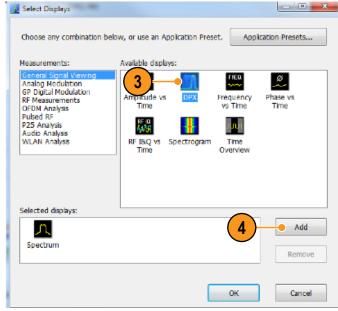


Demo7_Steps3-4

- 5. In Analog Modulation, select FM from the Available displays box.
- 6. Click the Add button.
- 7. Click the OK button.




TIP. Selecting displays

- You can also double-click the desired display to add or remove it.
- Five application presets are available for the display selection.

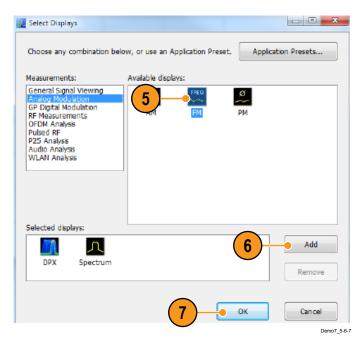


 Select the DPX display by clicking anywhere on it with the mouse, and set the CF to 2.445315 GHz and the Span to 500 kHz.

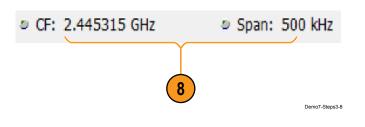

9. Click the Analysis control button.

Tek SignalVu-PC					
File	View	Run	Replay Marker		
0 💾	9	× 🗖	🖻 🏶 😤 💽		
			Demo7-9		

10. Under the Analysis Time tab, set the Analysis Length to 10 ms.

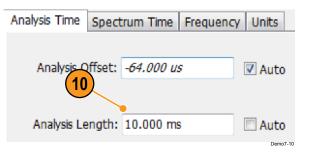

11. Click the FM display, and then click the settings button.




uemo/-12

12. Under the Parameters tab, set the Measurement BW to 200 kHz. FM Settings FM Settings Burst detect threshold: -100 dBc 12 Measurement BW: 200 kHz

NOTE. FM measurements readout

- +Pk: positive frequency deviation
- –Pk: negative frequency deviation
- RMS: RMS value of the deviation
- Pk-Pk: peak-to-peak frequency deviation
- Pk-Pk/2: peak-to-peak frequency deviation divided by two

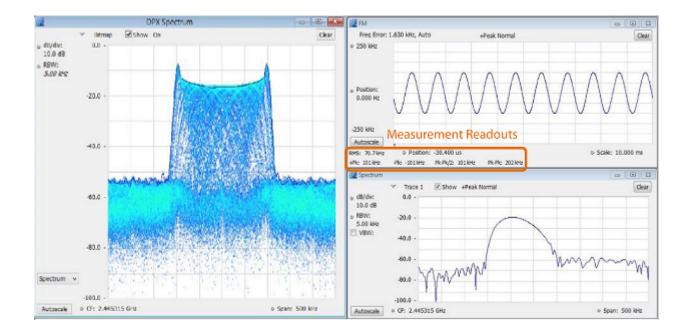

Demo 8: Digital modulation analysis

The General Purpose Digital Modulation Analysis provides vector signal analyzer functionality. A wide variety of modulation types are supported, allowing you to view your signals in Constellation, Eye and Trellis diagrams, measure the quality of the modulation, display time-domain waveforms for demodulated I & Q signals, EVM, Phase Error, Magnitude Error, and more. This example shows how to demodulate a QPSK signal with RSA306. This demonstration also introduces the concept of application presets to quickly set up for complex analysis tasks. This demonstration relies on the optional modulation analysis capabilities of SignalVu-PC. If you are using a basic version of SignalVu-PC, a trial license for this analysis can be accessed through the Tools: Manage Licenses menu of the software.


Instructions for the demo board

1. Use the ROW and COLUMN buttons to change the signal type from FM to QPSK1.




Instructions for the RSA306

1. In the Presets menu, click application.

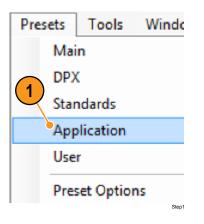


2. Select Modulation Analysis for the Preset.

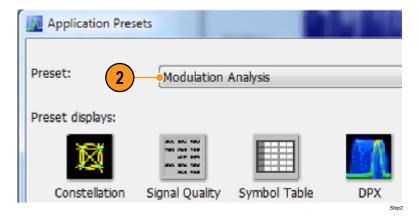

3. Click OK.




 Click the DPX display, set the CF to 2.445315 GHz and the Span to 10 MHz.





TIP. Save as application presets

To save setups so that they appear in the Application Presets window, save your setup in the folder C:\SignalVu-PC Files\User Presets. The saved setup will appear in the Application Presets window with the name you give the file. **5.** Click the Constellation display, and then click the settings button.



 Under the Modulation Params tab, Select QPSK from the Modulation Type list, set the Symbol Rate to 3.072 MHz, set Measurement Filter to Root raised cosine, Reference Filter to Raised cosine, and Filter parameter to 0.35.

Modulation Params	Freq & BW	Equalizer	Advance	d Params	Find	Analysis Ti	me Prefs
Modulation type	QPSK		•	Measurem	ent Fite	r: Root rais	ed cosine
Symbol Rate	: 3.072 MHz	:		Referen	nce Fite	r: Raised o	osine
				Filter Pa	aramete	r; 0.350	
			ľ				
		(6				Step6




TIP. Modulation filters

In most modulation schemes, signals are filtered to reduce the bandwidth prior to transmission. When the signal under test has been passed through a modulation filter, a matching Measurement Filter should be selected in the instrument in order to interpret symbols properly. The Reference Filter, while not used for demodulation, is important for making the proper error vector measurement calculations. This filter will normally be defined by the modulation/demodulation standard.

7. Click the Stop button.



8. Select the Symbol Table, right click the screen, and select Add Marker.

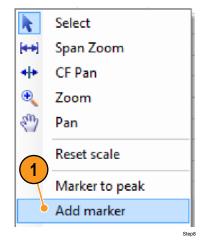

- **9.** Drag the marker to any cell in the Symbol Table. This sets the marker (MR) time value to the starting time for the cell containing the marker.
- **10.** Look for MR in the Constellation graph. Move the marker to different cells in the Symbol Table.



TIP. Symbol table

Each symbol value is assigned a position in the Constellation diagram. The Symbol Table will be used to demonstrate the mapping between quadrants in the Constellation diagram and the symbol values.



TIP. Correlated display

Not only are all the displays correlated through the shared data set, but the markers, which are inherently correlated, make it very easy to see how a data point in one domain relates to a specific data point in any other. This can greatly reduce troubleshooting time.

00 00 01 10 1 9 00 00 11 00 01 10 11 00 00 10 11 00 00 10 11 00 00 10 11 00 00 11 00 00 10 11 00 00 10 11 00 00 11 10 10 11 00 00 10 11 00 00 10 11 00 00 10 11 00 00 10 11 00 00 10 11 00 00 10 11 00 00 10 10 11 00 00 10	<u>k</u>	Symbol Table	- • •	Constellation
11 01 01 01 10 11 01 00 10 <td< th=""><th></th><th>-</th><th></th><th>✓ Trace1 Show Vectors</th></td<>		-		✓ Trace1 Show Vectors
RMS Peak Location EVM 4.176 % 8.551 % 7.00 Symbol -27.585 dB -21.360 dB -18.0 - Phase Error: 1.791 ° 4.542 ° 102.00 Mag Error: 2.777 % 8.151 % 1.00 Symbol MER (RMS): 27.585 dB Rho: 0.998257	11 01 01 01 00 11 < Marker: N	01 10 11 01 00 00 00 01 11 01 10 01 10 00 10 IR Symbol: 11	00 10 10 10 10 01 v	Marker: MR Time: 11.00 Symbol Mag: 1.008 Phase: 136.4 ° Symbol: 11 Value: 01
EVM 4.176 % 8.551 % 7.00 Symbol -18.0 2.4453525 GH2 MR -27.585 dB -21.360 dB -21.360 dB -20.00 RBW: -38.0 -14.00 dBm <	2			
	Phase Error:	-27.585 dB -21.360 dB 1.791 ° 4.542 °	102.00	→ −18.0 - 2.4453525 GH2 MR > RBW: -38.0 - -14.00 dBm -14.00 dBm Spectrum -58.0 - - - -

Demo 9: EMI spurious

The spurious measurement in the RSA306 is set up to change limits vs. frequency, and antenna correction factors can be applied. Violations above the user-set limits are shown in red on the table. This example shows how to use the spurious display in SignalVu-PC and the RSA306 to perform EMI pre-compliance and diagnostics.

Instructions for the demo board

 Keep the same setting as the last demo. Use the ROW and COLUMN buttons to change the signal type from QPSK1 back to CW.



Instructions for the RSA306

1. Click Preset.




2. Click the Display button.



Demo9-Step2

Demo instructions

- 3. In RF Measurement, select Spurious from the Available displays box.
- 4. Click Add to add the application to the Selected Displays list.
- 5. Select the Spectrum icon in the Selected Displays list.
- 6. Click Remove to clear the icon from the list.
- 7. Click OK.

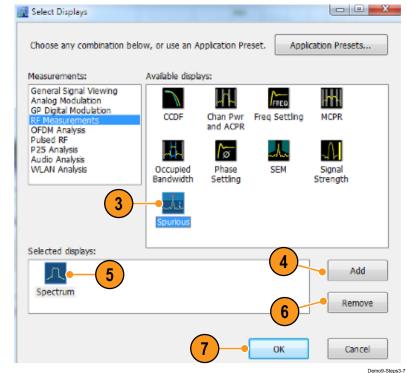

8. Click the settings button.



9. In the Scale tab, select the Log scale to reset the display to show the frequency axis in a logarithmic scale.

Trace Scale Prefs		
	Horizontal	
	Start:	190.0 MHz
Reset Scale	Stop:	550.0 MHz
9	🛛 Log	Autoscale
		Demo9-Step



TIP. Loss correction

The External Gain/Loss Correction tab

under the amplitude control panel (Line) allows you to apply a correction to a signal to compensate for the use of external equipment, such as an amplifier or attenuator. External loss tables can be used to apply a frequency dependent gain/loss correction to the signal.

e Ranges	and Li	imits	Trac	ce	Scale	Pref	fs				_
Stop (Hz)	Filter	BW (Hz)	ut	etector	VBW	"hrshld			Expand	—12
310.00	RBW	1.000	M	/	+Peak	1M	-50	6.0		Reset	-
550.00	RBW	2.000	M	/	+Peak	1M	-50	6.0		layout	_
0.000000	RBW	1.000	M	/	+Peak	1M	-50	6.0			—(10)
0.000000	RBW	1.000	M	/	+Peak	1M	-50	6.0		Load	
0.000000	RBW	1.000	M	/	+Peak	1M	-50	6.0	Ŧ	Save	
								1	\neg		
🖳 FO	C Pai	rt 15,	, Ra	d,	Class	; A (1	l `).	(1	1)	
											Demog Steps10 12


- **10.** Under the Ranges and Limits tab, click Load to select the appropriate limit line and measurement condition.
- **11.** Select FCC Part 15, Rad, Class A (10m).csv for this example.

12. A larger new resized window of range and limit table can be displayed by clicking Expand.

You can edit the start and stop range, filter shape, RBW, VBW, detector, threshold and excursion, and limit line.

		On	Start (Hz)	Stop (Hz)	Filter Shape	BW (Hz)	Auto	Detector	VBW (Hz)	VBW	Thrshid (dBm)	Exersn	Mask	Abs Start (dBm)	Abs Stop (dBm)	Abs Same	Rel Start (dB)	Rel Stop (dB)	Rel Same
•	А	1	30.000000M	88.000000M	CISPR	120.000k	N	CISPR	1k		-87.99	6.0	Abs	-67.99	-67.99		-30.000	-30.0	
	в	×	88.000000M	216.00000	CISPR	120.000k	N.	CISPR	9k		-83.49	6.0	Abs	-63.49	-63.49		-30.000	-30.0	
	с	×	216.00000	960.00000	CISPR	120.000k	N.	CISPR	3k		-80.49	6.0	Abs	-60.49	-60.49		-30.000	-30.0	
	D	×	960.00000	6.000000G	CISPR	1.000M	N	CISPR	30k		-77.49	6.0	Abs	-57.49	-57.49		-30.000	-30.0	
	Е		0.000000	0.000000	RBW	1.000M	N	+Peak	1M		-50.00	6.0	Abs	-50.00	-50.00		-30.000	-30.0	
	F		0.000000	0.000000	RBW	1.000M	N	+Peak	1M		-50.00	6.0	Abs	-50.00	-50.00		-30.000	-30.0	
	G		0.000000	0.000000	RBW	1.000M	V	*Peak	1M		-50.00	6.0	Abs	-50.00	-50.00		-30.000	-30.0	
	н		0.000000	0.000000	RBW	1.000M	N.	+Peak	1M		-50.00	6.0	Abs	-50.00	-50.00		-30.000	-30.0	
	1		0.000000	0.000000	RBW	1.000M	V	Peak	1M		-50.00	6.0	Abs	-50.00	-50.00		-30.000	-30.0	
	J		0.000000	0.000000	RBW	1.000M	N	+Peak	1M		-50.00	6.0	Abs	-50.00	-50.00		-30.000	-30.0	
	ĸ		0.000000	0.000000	RBW	1.000M	N	+Peak	1M		-50.00	6.0	Abs	-50.00	-50.00		-30.000	-30.0	

After loading the spurious table, your display should look similar to the picture below. The green bar is the loaded limit line as standards suggest.

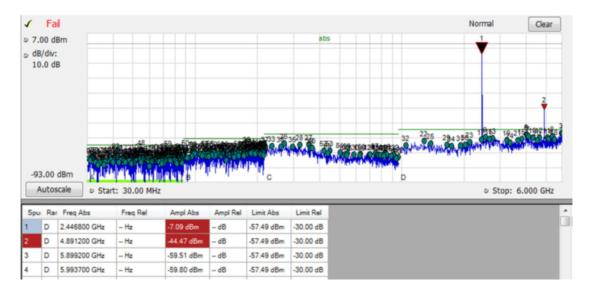

Demo 10: FM listening (Demo board not needed)

The RSA306 Series USB Spectrum Analyzers can demodulate audio signals, which can help you to identify unknown radio signals. You access the Audio Demod tab from the Settings control panel of the DPX Spectrum plot display. This Demo shows how to use the RSA306 to demodulate the local FM radio signals and listen to the programming.

Instructions for the antenna

 Unplug the BNC cable from the RSA306, and connect the provided whip antenna to the RSA306 input.



Instructions for the RSA306


- 1. Click the Preset button.
- In the Spectrum display, set the CF to 97.75 MHz and the Span to 20.5 MHz.



TIP. FM broadcasting

Throughout the world, the FM broadcast band falls within the VHF part of the radio spectrum. Usually the FM band starts from 87.5 MHz to 108.0 MHz. (The frequency modulation radio broadcast band in Japan is 76-90 MHz.)

3. Set the RefLev to -30 dBm.

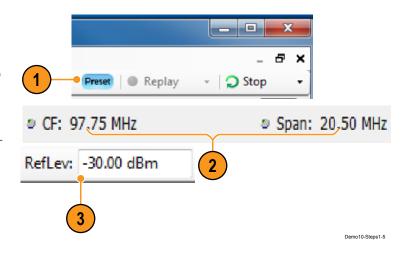


- **4.** Right click the screen, and click Marker to peak.
- 5. Click To Center in the bottom marker setting area. This sets the center frequency of the analyzer to the center of the signal.

	k	Select	1	
	[↔	Span Zoom		
	4+	CF Pan		
	e,	Zoom		
	3	Pan		
		Reset scale		
(4)-	-	Marker to peak		
$\overline{}$		Add marker		
		All markers off	5	
Frequ	ency	✓ 91.4975 MHz	To Center	Peak
				Demo10-Steps4-5

6. In the Setup menu, click Audio.

TIP. Audio on DPX


Audio Demodulation is also available when DPX display is running, but the sound quality may be degraded depending on the processer of the host PC.

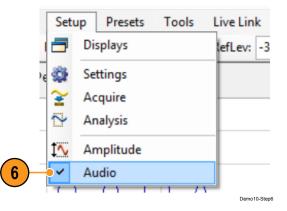

- 7. Select FM 200 kHz as the demodulation.
- 8. Click Run to start listening to the FM radio signal.
- **9.** Adjust the Audio Gain setting so you can hear the demodulated signal. The sound level is also affected by the setting of the Windows volume control.
- **10.** Click the Browse... button to select the location you want to save the steam file.

11. Enable the Activate button to start saving the audio, and disable the activate button when you want to stop saving. The saved audio format is .wav, which can be played by Windows media player in your PC.

The screenshot below shows the RSA306 is tuned to 91.5 MHz center frequency to listen the local FM broadcasting. Drag the marker to other spectrum peaks, center the peaks, and listen to the programming at other channels.

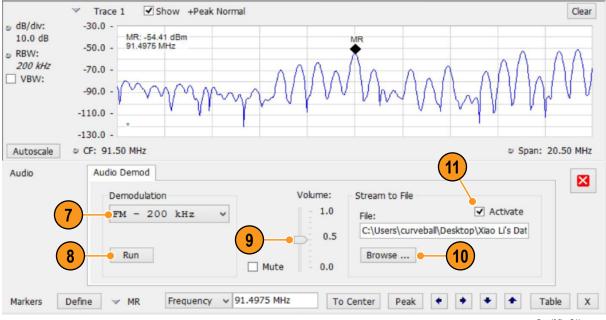

Demo10-Steps7-11

Demo 11: ISM band DPX (Demo board not needed)

The real time streaming of the RSA306 combined with the DPX processing of the SignalVu-PC software is designed to address the measurement challenges associated with dynamic RF signals such as the bursted packet transmissions of WLAN and Bluetooth. Combo devices that use both Bluetooth and 802.11b/g/n WLAN networks have a unique set of RF interference problems because they share the same 2.4 GHz Industrial/Scientific/Medical (ISM) frequency band. In this example, we will explore this real-world problem using a whip antenna. The demonstration relies on WLAN and Bluetooth signals from a tablet, phone or PC that you can control On or Off.


Instructions for the antenna

1. Keep the whip antenna attached to the RF input on the demo board as in the last example.




Instructions for the RSA306


- 1. Click the Preset button.
- 2. Click the Display button.

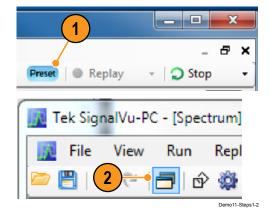

- **3.** In General Signal Viewing, select DPX from the Available displays box.
- Click the Add button. This will add the DPX icon to the Selected Displays box (and remove it from the Available displays box).
- 5. Click the OK button.

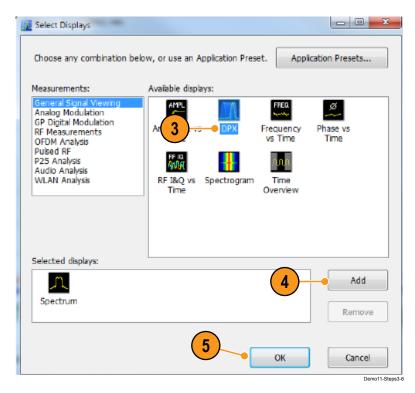


 In the DPX display, set the CF to 2462 MHz or to the center frequency of one of the WLAN channels. Set the Span to 40 MHz. See the tip below.





TIP. 2.4 GHz WLAN channels

There are 14 channels designated in the 2.4 GHz range (2400– 2483.5 MHz) spaced 5 MHz apart. Channels 1 (2412 MHz), 6 (2437 MHz), and 11 (2462 MHz) are the most common channels to choose, and most routers will use one of them as the default channel. 7. Select the Split view.




8. Set the RefLev to -40 dBm.




9. In the DPX display, and click the settings button.



10. Under the Bitmap Scale tab, set the Max scale to 3% for the DPX Spectrum Display.

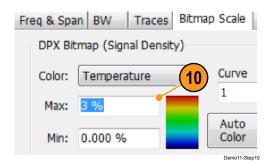

 Under the Ampl Scale tab, set the Max color scale to -40 dBm for the DPXogram Display.

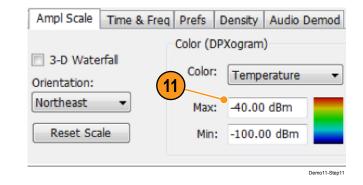


12. In the Traces tab, set the Dot Persistence to Infinite.

BW	Traces	Bitmap	Scale	Ampl S	cale 1
: Bitma	ар	•	🔽 Sh	ow	
			🔽 Do	t Persist	ence
		(12)	\bigcirc	Variable	: 1.0 s
			0	Infinite	
					Demo11-Step12

13. Turn the WLAN function Off, then On in your smart phone/tablet/PC while monitoring with the setup above.

Check the DPX display to see if you can see the spectrum of the WLAN signals. If no signal, you can change the center frequency of the RSA306 to other channels.

••••• AT&T 4G	16:49	֎ ୶ ≱ 66% ■⊃
< Settings	Wi-Fi	
Wi-Fi	13)• (
CHOOSE A NET	WORK	
Other		



Demo11-Step13



TIP. DPX persistence

You can set the Dot Persistence to be Variable or Infinite.


- In variable persistence mode, you specify a decay period that limits how long a point will be displayed.
- In infinite persistence mode, once a point in the display has been written to, it will remain visible indefinitely.

We start with infinite persistence because it ensures that all transients are kept on screen.



TIP. Wi-Fi test mode

To better observe the WLAN activities in the DPX display, you can cause both uplink and downlink activity on your device by navigating to an "internet speed testing" webpage to test both the uploading and downloading speed, and monitor the DPX display of the RSA306 at the same time.

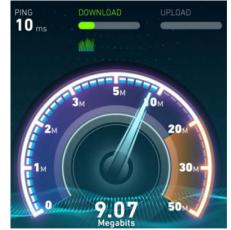


14. Turn the Bluetooth function Off, then On in your smart phone/tablet/PC while monitoring with the setup above.

••••• AT&T 🔶	17:06	@ ┦ ∦ 61	% 🔳)
Settings Blue	etooth	tirtim/specti	
	over (pa		
Bluetooth	14)• (\bigcirc
DEVICES Solve			
GT BT-Receiver	Not C	Connected	(i)
HandsFreeLink	Not C	Connected	(j)
Now Discoverable			
		De	emo11-Step14


15. Click Stop to stop the acquisitions when you have a pattern on the spectrogram you would like to examine.



16. Right click the display, and click Add markers twice to add two markers. Then you can measure the distance between hops in frequency and time using the markers on the spectrogram.

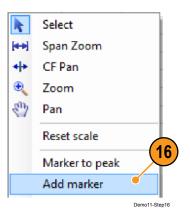

The following screen shot shows the real time display in the RSA306. You can see a typical WLAN interchange between a nearby smart phone/tablet/PC and a more-distant network access point (AP). The smart phone/tablet/PC signal is nearly 30 dB stronger than the AP's signal because it is closer to the measurement antenna. At the same screen, you can also see the Bluetooth signals, and even the measurements of the time and frequency intervals between those hop signals.

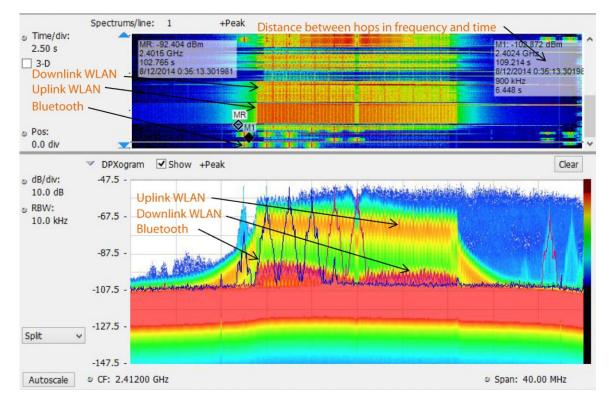

RSA306 Self-Guided Demo